

HOW TO ORDER

Regulator – R08-R38

HOW TO ORDER

Regulator Numbering System

R 1 8 – 0 3 – F 0 G 0

R Unit Function

R = Regulator

1 Family

8 08 = Miniature
 18 = Compact
 28 = Standard
 38 = Jumbo

0 Thread Type

0 = NPT
 C = BSPP (ISO, R228 [G Series])

3 Pipe Size

1 = 1/8	4 = 1/2
2 = 1/4	6 = 3/4
3 = 3/8	8 = 1

F Regulator

Diaphragm Function	Fluorocarbon	Spring Range			
		0-30 psi (0-2,1 Bar)	0-60 psi (0-4,1 Bar)	0-125 psi (0-8,5 Bar)	0-250 psi (0-17 Bar)
Relieving	No	C	D	F	G
	Yes	J	K	L	M
Non-relieving	No	P	Q	R	S
	Yes	V	X	Y	Z

0 Options

0 = None

G Options

0 = None
 E = Bar Gauge (Except 38 Series)
 C = Tamper Resistant Regulator Adj (Tamper kit not installed. Kit is shipped loose in carton)
 G = Pressure Gauge
 P = Metal Panel Nut (Except 38 Series)
 R = Reverse Flow

0 Options

- 0 = None
- E = Bar Gauge (Except 38 Series)
- C = Tamper Resistant Regulator Adj (Tamper kit not installed. Kit is shipped loose in carton)
- G = Pressure Gauge
- P = Metal Panel Nut (Except 38 Series)
- R = Reverse Flow
- K = Pressure Gauge mounted on back side (R08 only)

Note: When selecting from the options columns, please enter letters in alphabetical order, for example:

R18 – 03 – F 0 G 0